

# JZ-600-Y-CY flexible, number coded, 0,6/1kV, Cu screened

meter marking, EMC-preferred type



Part No.	No. cores x cross-sec. mm <sup>2</sup>	Outer ø app. mm	Cop. weight kg / km	Weight app. kg / km	AWG-No.
11574	2 x 2,5	11,8	110,0	272,0	14
11575	3 G 2,5	12,7	148,0	298,0	14
11576	4 G 2,5	13,8	169,0	345,0	14
11577	5 G 2,5	15,1	220,0	427,0	14
11578	7 G 2,5	16,3	284,0	561,0	14
11580	12 G 2,5	21,3	470,0	857,0	14
11582	18 G 2,5	25,4	572,0	1355,0	14
11584	25 G 2,5	30,0	740,0	1995,0	14
11590	2 x 4	14,2	124,0	306,0	12
11591	3 G 4	15,1	178,0	391,0	12
11592	4 G 4	16,2	234,0	527,0	12
11593	5 G 4	18,0	284,0	700,0	12
11594	7 G 4	19,8	321,0	920,0	12
11596	12 G 4	25,8	581,0	1510,0	12
11597	2 x 6	15,9	176,0	420,0	10
11598	3 G 6	16,9	245,0	629,0	10
11599	4 G 6	18,7	316,0	731,0	10
11600	5 G 6	20,4	442,0	1105,0	10
11601	7 G 6	22,2	530,0	1465,0	10
11602	2 x 10	18,3	260,0	845,0	8
11603	3 G 10	19,2	367,0	1125,0	8
11604	4 G 10	21,2	549,0	1345,0	8
11605	5 G 10	23,2	604,0	1635,0	8
11606	7 G 10	26,8	820,0	2210,0	8
11607	2 x 16	22,8	491,0	1150,0	6
11608	3 G 16	24,7	653,0	1395,0	6
11609	4 G 16	27,0	807,0	1870,0	6

Part No.	No. cores x cross-sec. mm <sup>2</sup>	Outer ø app. mm	Cop. weight kg / km	Weight app. kg / km	AWG-No.
11610	5 G 16	30,0	940,0	2720,0	6
11611	7 G 16	32,2	1345,0	3213,0	6
11612	3 G 25	29,2	920,0	2465,0	4
11613	4 G 25	32,0	1169,0	2750,0	4
11614	5 G 25	35,7	1420,0	3490,0	4
11615	7 G 25	39,0	1921,0	4980,0	4
11616	3 G 35	32,3	1250,0	3230,0	2
11617	4 G 35	35,8	1680,0	4100,0	2
11618	5 G 35	39,5	2020,0	4950,0	2
11619	3 G 50	39,7	1887,0	4590,0	1
11620	4 G 50	43,4	2370,0	5780,0	1
11621	5 G 50	47,8	2880,0	7210,0	1
11622	3 G 70	44,9	2516,0	5610,0	2/0
11623	4 G 70	49,1	3257,0	7480,0	2/0
11624	5 G 70	53,8	4032,0	9390,0	2/0
11625	3 G 95	49,6	3086,0	8585,0	3/0
11626	4 G 95	54,1	4060,0	10220,0	3/0
11627	5 G 95	57,7	5244,0	13800,0	3/0
11628	3 G 120	51,5	4176,0	11105,0	4/0
11629	4 G 120	59,4	5231,0	13750,0	4/0
13137	4 G 150	67,9	7760,0	15990,0	300 kcmil
13147	4 G 185	74,0	7760,0	18470,0	350 kcmil

Dimensions and specifications may be changed without prior notice. (RA01)

## Our Service on the Internet

The screenshot shows the HELUKABEL website interface. At the top, there is a navigation menu with links for Download centre, Logistic centre, Company, Products, Quality, News, Contact, Service, Opinion, and Imprint. Below the menu, a breadcrumb trail indicates 'You are here: Home > Contact > Contact person'. A 'Contact' sidebar lists 'Headquarters Hemmingen', 'Approach', and 'Contact person'. The main content area is titled 'Contact person' and contains the text: 'In order to respond to your request for HELUKABEL® contact person in'. Below this is a 'Post code search for Germany' section with an input field and a button labeled 'Finden Sie Ihren Ansprechpartner'. On the right, there is a 'HELUKABEL world-wide' section with a world map and a 'please select...' dropdown menu.

### Contact person

Enter your postal code to find out your personal customer sales consultant, who serves as your contact for questions and offers. Simply click and check it out. We are looking forward to hearing from you.

[www.helukabel.de](http://www.helukabel.de)